


Telecaster HS 3 Way Toggle Switch Left Handed Wiring Diagram

500k Reverse Taper Pots

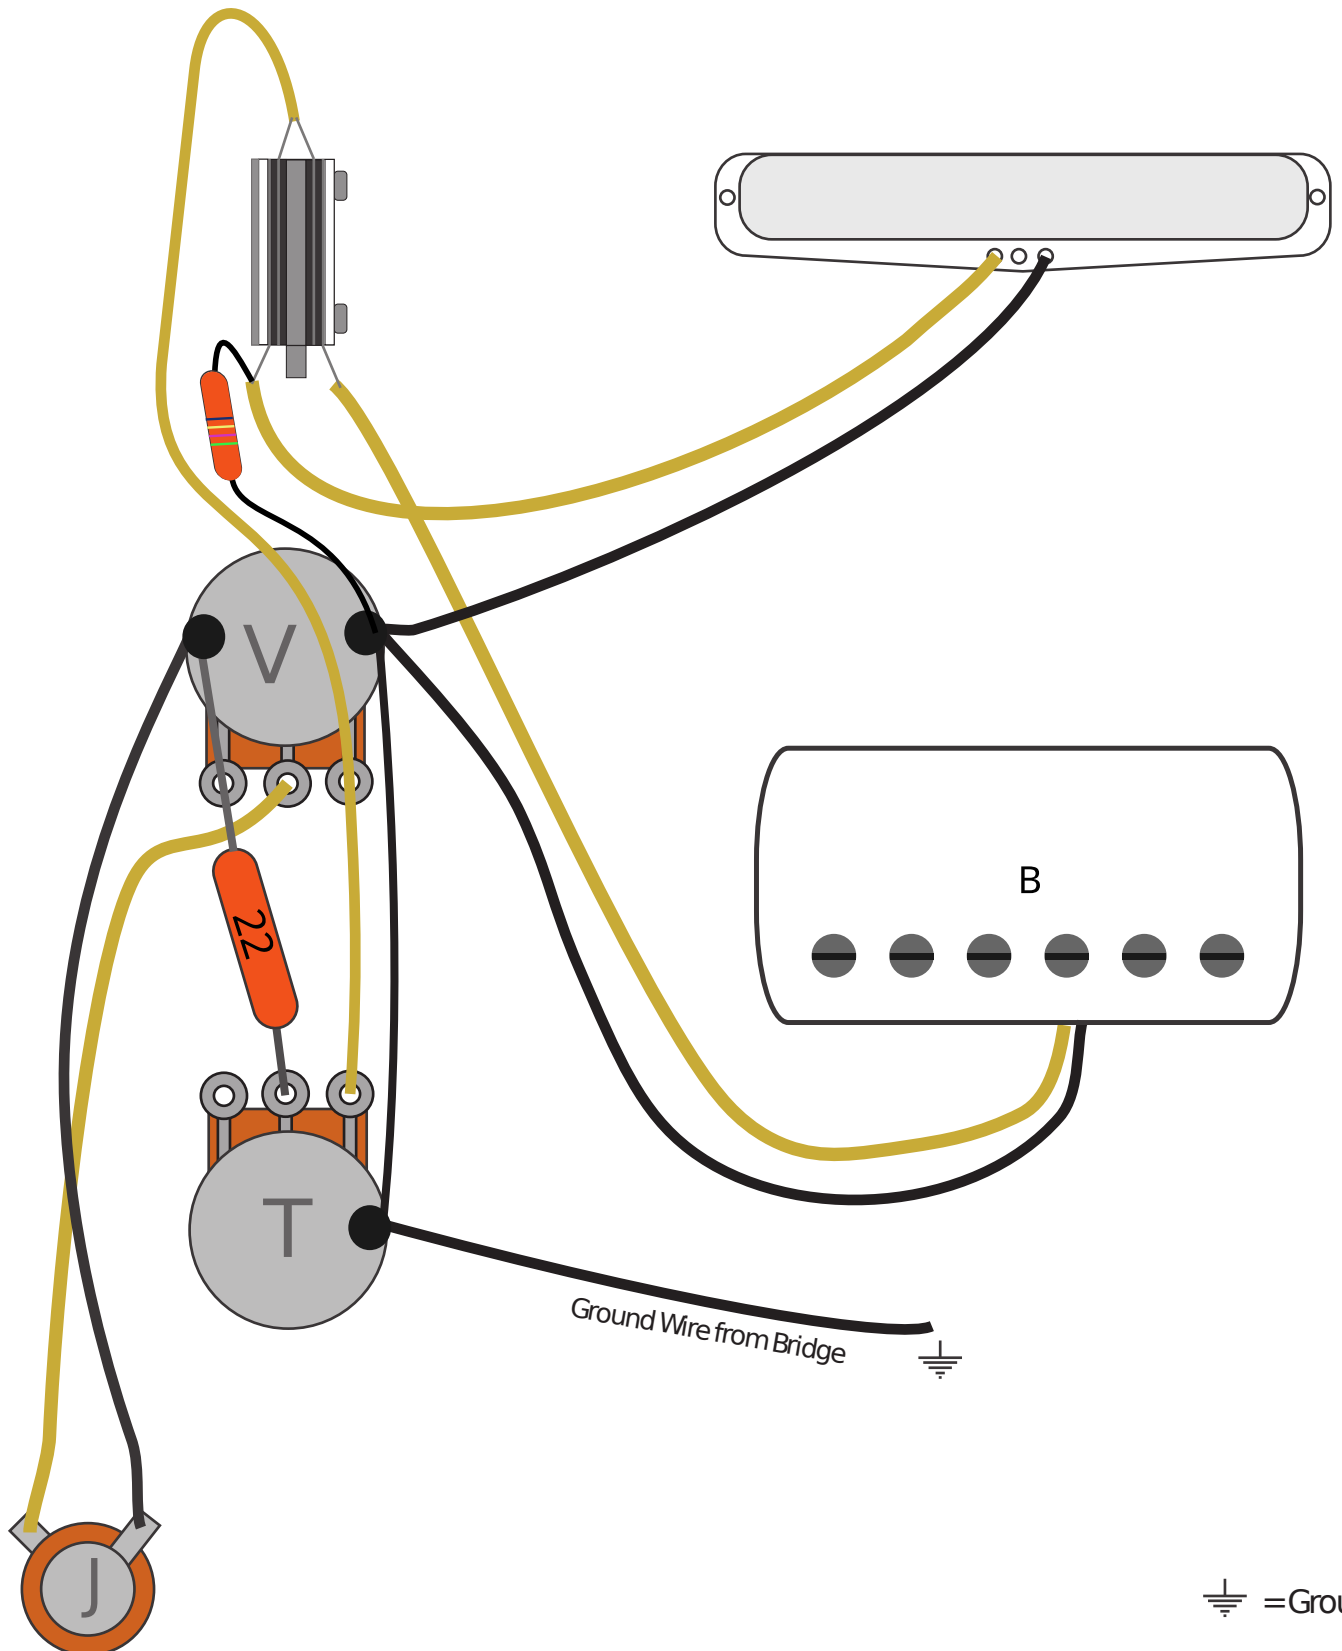

⏏ = Ground